

then open Work mode section located in the "Server" window. Enter External mode settings and activate Connection to cloud mode in the window that appears.