

iRidium cloud gate function is available only if there is a server in a project. Setting is done in the configurator in the "Server" tab. To activate work via cloud only 2 settings have to be made.