

Config	Server
General	Name: LNFUONGServer
Floors & Rooms	Internal Host: 192.168.0.32
Devices	Port: 3044
Server	Version: 1.2.3 (2024)
Schedules	Check server update: Check
Routines	PROJECT CONTROL
Macros	Walk mode: Auto switch >
Modes	Local WiFi >
Users	External Host >
	External API Port (8443) >
	External Protocol Port (8084) >
	Project synchronization: Synchronize
	Activate

[Start project](#)