

Besides standard parameters, any parameters required for module initialization can be asked. Driver parameters are set in the driver automatically. The other parameters are to be asked and used manually.