

## SubDevice.removeCondition()

to remove Condition of the subdevice

### Syntax

```
Module.getSubDevice(name).removeCondition(Condition)
```

<b>input</b>	<b>sample</b>	<b>description</b>
name	"MySubDevice"	type: string the subdevice name in the iRidium project
Condition	Condition	type: Object the Condition object
<b>output</b>		
successful or not		type: Boolean successful

### Example:

```
Module = B.getModule(ModuleID);
sub = Module.getSubDevice("MySubDevice");
channelName1 = "GRPS:myChannel" // full channel name for device "GPRS" and
his channel "myChannel"
myCondition = sub.addCondition({ // create "send_number" Condition
    ConditionType: "Simple",
    Type: "send_number",
    Param: SMSnumber,
    ChannelName: channelName1,
    Name: "Send " + SMSnumber,
    Compare: "eq"
});
SubDevice.removeCondition(myCondition);
```