

IR.DEVICE_BLE_SCANNER

the identifier of the BLE scanner. It is used at scanner creation

Syntax

```
IR.CreateDevice(IR.DEVICE_BLE_SCANNER)
```

input	sample	description
ID	IR.DEVICE_BLE_SCANNER	type: Number the identifier of the BLE scanner
output		
Object		type: Object the reference to the device

Example:

```
var Scanner = IR.CreateDevice(IR.DEVICE_BLE_SCANNER);
```

It activates the event: IR.EVENT_DEVICE_BLE_FOUND