

## IR.DEVICE\_BLE\_DEVICE

the identifier of the BLE device. It is used at connection to a peripheral Bluetooth device

### Syntax

```
IR.CreateDevice(IR.DEVICE_BLE_DEVICE, in_name, in_uuid);
```

<b>input</b>	<b>sample</b>	<b>description</b>
ID	IR.DEVICE_BLE_DEVICE	type: Number the identifier of the BLE device
in_name	"My_BLE_device"	type: string the device name (it is recommended to use the name from the scanner or advertisement information)
in_uuid	"550e8400-e29b-41d4-a716-446655440000"	type: string the device identifier from the scanner
<b>output</b>		
Object		type: Object the reference to the device

### Example:

```
var device = IR.CreateDevice(IR.DEVICE_BLE_DEVICE, in_name, in_uuid);
```