

Device.ReadCharacteristic

to read the value of the characteristic

Syntax

```
IR.CreateDevice(IR.DEVICE_BLE_DEVICE).ReadCharacteristic(in_ble_cha)
```

input	sample	description
ID	IR.DEVICE_BLE_DEVICE	type: Number the identifier of the BLE scanner
in_ble_cha		type: Object the object of the characteristic

output

-

Example:

```
var device = IR.CreateDevice(IR.DEVICE_BLE_DEVICE);  
device.ReadCharacteristic(in_ble_cha);
```

it activates the event: IR.EVENT_CHARACTERISTIC_READ - the characteristic is read.