

Device.ReadDescriptor

to read the descriptor value

Syntax

```
IR.CreateDevice(IR.DEVICE_BLE_DEVICE).ReadDescriptor(in_ble_des)
```

input	sample	description
ID	IR.DEVICE_BLE_DEVICE	type: Number the identifier of the BLE scanner
in_ble_des		type: Object the descriptor object

output

-

Example:

```
var device = IR.CreateDevice(IR.DEVICE_BLE_DEVICE);  
device.ReadDescriptor(in_ble_des);
```

It calls the event: IR.EVENT_DESCRIPTOR_READ - the descriptor is read.