

The method can be used only with [AV & Custom Systems](#) and [Global Cache](#) drivers. It allows to send a random set of data (string, number, array) to equipment