

The method can be used only with [AV & Custom Systems](#) (HTTP) drivers. It allows to send to equipment a data array with a pointer to a parent object (execution context). A number or events can be added inside SendEx that send data about their work to functions. Events allow to track getting data from HTTP server and process different stages of work with a server.