

Adding and setting up of the driver.

Add the driver: go to the "I/O" branch (under the project created in the tree) and drag the required driver in the "Drivers" field. On the basis of the added driver the server driver is created (iRidium Server). You can see the example of adding the "Crestron" driver on the image below: