

Setting up drivers in panel modules.

There will be 2 drivers in the created panel module: iRidium Server (the server driver) and the driver of the device you added when creating the server module (Crestron in the example). iRidium Server properties: