

Properties of the server driver are available for editing. It contains two properties which are not typical for standard drivers: Need Setup and Source Project. **Need Setup** - controls the possibility of editing the driver properties (Host, Port, etc.). It can be true or false.