

In order not to send commands to the server driver and the device driver together, one of the drivers is disabled in the script. That is why **it is required** to write the script when creating the server module (even when the module works with the native driver). See how to create the script for server work in section 5.8.