

Initialization script - **a script file added in the project as many times as many similar modules which require this script the project has. It is usually a file containing definitions of driver instances or components.** In the bottom left part of the **Scripts** window, in the **Global** field, it is set **false** by default. You do not need to change it for initialization scripts.