

Remote - a visual module component which is hidden by default. It opens only when a corresponding item of the widget is clicked. It does not have size limitations (not more than the panel display size) and can be located in any part of the room interface (it is usually located in the middle of the panel display). It contains additional module functions.