

The notion of subdevice can be explained on the example of a 6-channel dimmer. Each channel is considered as 1 subdevice. But if you do not use all channels, you can turn off unused subdevices in module settings and they will not be counted when the price is calculated. The license does not count sensors (motion sensors, leakage sensors and other sensors). The number of subdevices can be checked in the General tab.