

Check if there is memory leak in the module. To do it, launch a module on a panel and let it work for 24 hours. 24 hours later a module must continue to work correctly.