

Go to a "Server" field. In this field you need:

- **Work mode** - connection mode to iRidium Server
  - Auto - automatic switching between local mode and the mode of operation via the Internet
  - Local - local connection only
  - External - connection through the internet only
- **External Host** - external router IP-address
- **External API port** - port for work with authorization and service functions of the server. It uses the **8443** port in the local network
- **External Protocol Port** - port for work with devices, used in the project. It uses the **30464** port in the local network

If the project must work only in the local network you have to specify "Local" in the "Work mode" field. For work with server through the internet you have to specify "External" or "Auto" and fill the external network settings fields. For remote working you have to create on the router 2 external ports for **8443** and **30464** local ports.