

In case of such an error, enter the command:

```
sudo rm /tmp/irdaemon.pid
```

```
pi@raspberrypi /iridiumserver $ sudo rm /tmp/irdaemon.pid
```

and restart the server (item 8).